

creative icon™ 2 User's Guide - Voice Control

TABLE OF CONTENTS

1	Voice Control	1
	Voice Control	2
	Important Information!	2
	Amazon Alexa	2
	Prepare Your creative icon™ 2	2
	Set up Amazon Alexa	2
	Set Up Your creative icon™ 2 as a Smart	
	Home Device	7



Voice Control

Voice Control

Voice Control is a feature in which you can send voice commands to your sewing and embroidery machine and control it without pressing any buttons. For example you can ask your machine how to thread it or to load a specific stitch. The **creative iconTM 2** machine is compatible with Amazon Alexa. Through these devices or apps you can send voice commands that will be executed by your machine.

Getting the Amazon Alexa app to cooperate with your WiFi, Bluetooth or devices can sometimes be a hassle. With the following instructions we will try to guide you smoothly through the process.

The steps described might vary depending on what smart device and software release you are using and whether or not you are/have been connected to the Amazon Alexa app or device before.

If you experience problems with your Alexa Setup, please visit the Alexa support web site.

To get started with the **creative icon™ 2** Voice Control you need to download the Amazon Alexa app and follow the steps stated below.

Important Information!

The Voice Control feature is limited to usage in countries where Alexa is operating. The availability in different countries is managed by third-party suppliers and is subject to change.

The instructions below are general descriptions and include third-party suppliers. Availability, procedure and functionality are subject to change.

Voice Control can be used in many countries, if available, as explained above. However, your language might not be supported by the Alexa app. If your language is not supported, you can use any of the languages listed below. Make sure to set your device and your sewing machine to that language, otherwise your commands can be misunderstood.

Note: The Voice Control feature will be available in English, French, Spanish and German.

Amazon Alexa

Prepare Your creative icon[™] 2

Turn on your **creative icon™ 2** and enter Sewing or Embroidery mode.

Connect it to your WiFi by touching the WiFi icon in the upper left corner of the machine screen. Enter the WiFi password.

Touch the mySewnet cloud icon (1) to login to your mySewnet account (2). If you do not have a mySewnet account, you must create one (3).

Note: You can also create your account at www.mysewnet. com.

The machine needs to be connected to your WiFi and you should be signed in to your mySewnet account.



Set up Amazon Alexa

The Alexa "mySewnet" skill used to communicate with your **creative icon**TM **2**, is a merge between an "Alexa Smart Home" skill and a "Lifestyle" skill. This means that some actions can be used with smart home commands while others must be communicated using "just ask Alexa" commands. Knowing what command to use for what action can be a bit confusing at a start, but you will learn. In the separate document "Voice Control - Commands List", it is clearly indicated what commands to use with respective action.

On Your Smart Device

- Download/open the Amazon Alexa app.
- Create an Amazon Alexa account, or login to your existing Amazon Alexa account.

Tip: If you experience difficulties with the linking of accounts, make sure you are connected to the same WiFi as your mySewnet account.

If you login to the Alexa app for the first time or when you create a new account, you are asked to do certain settings such as make voice ID settings and give access to bluetooth and your microphone.

The Voice ID Settings help Alexa to better recognize your voice and accent. Giving access to the microphone and bluetooth are necessary to be able to talk to Alexa. The Alexa app will guide you through those steps.

Note: If you have other devices in the same network, Alexa might want you to connect to those as well. This is not necessary to manage your **creative iconTM 2**. If you want to connect other devices, follow the instructions in the app.





These settings are only for the Alexa app.

"Alexa" when the app is open and in use.

Enable Alexa Hands-Free

Alexa responds to your voice any time you say

HANDS-FREE

LANGUAGE

Tap or say "Alexa"

Tip: To be able to communicate with Alexa Hands-Free, without tapping the blue dot in the app before giving commands, enable handsfree in the Alexa App Settings menu (More/Settings/Alexa App Settings).

Link mySewnet to Alexa

You can link your mySewnet account to your Alexa account using the alexa.amazon.com site or the Alexa app.

Note: Currently, the linking of accounts cannot to be done using the app. Instead link your mySewnet account to your Alexa account using a computer.

Link mySewnet to Alexa Using Computer

1. Enter the link below in the search field of your web browser. The link will take you directly to the Alexa Skill Store and the mySewnet skill.

Note: Reviewers experience best result when using Google Chrome as web browser.

Australia:

https://www.amazon.com.au/dp/B096ZXK4LR

United Kingdom: https://www.amazon.co.uk/dp/B096ZXK4LR

India:

https://www.amazon.in/dp/B096ZXK4LR

- 2. If you are not currently signed in to your amazon account, click "Sign-In". Enter your amazon account details and click "Sign-In".
- 3. Now click on "Enable" to link the mySewnet skill.

	mySewnet by SVP Worldwide		Get this Skill
mySewnet	Rated: Guidance Suggested		Enable
	Free to Enable		Account line or required
	"Alexa, ask creative icon two to connect"	"Alexa, ask creative icon *** start sewing" >	By enabling, this skill can be accessed or all your available Alexa devices.
	Chown in: English (CA) at Son 3	Il supported languages	

	mySewnet by SVP Worldwide		Get this Skill
mvSewnet	Rated: Guidance Suggested 습습습습습습 0		Enable
	Free to Enable		Account line or required
	"Alexa, ask creative icon two to connect"	"Alexa, ask creative icon *** stort sewing" >	By enabling, this skill can be accessed on all your available Alexa devices.

Description

ewnet Skills enable you to control your mySewnet-enabled embroidery machine that supports voice recognition.

left mySewnet



4. Alexa will ask mySewnet for access.

Click "Allow".

Note: If you are not signed in to mySewnet, a mySewnet login screen is shown instead. Enter your account details and touch Sign In.

- 5. Once the accounts are successfully linked, you will get a confirmation on the screen.
- 6. You can now use the Alexa app to communicate with your machine.

Tip: In the section <u>Set Up Your creative iconTM 2 as a Smart</u> <u>Home Device</u>, you will learn how to set up your creative iconTM 2 as an Alexa Smart Home device.

The list of commands that can be used is growing continuously. A full list of commands will be available in "Voice Control – Commands List".

Link mySewnet to Alexa Using the Alexa App

Login to mySewnet on your **creative icon™ 2** and login to the Alexa app. (If you experience problems, make sure both accounts are using the same WiFi network.)

Now it is time to link your Alexa account to your mySewnet account. Here, the steps and screens shown might differ to the ones appearing on your device.

- 1. Find "Skills & Games". They can be found on the Home Screen or under the "More" menu (depending on what device you have).
- 2. Touch the magnifying glass in the top right and search "mySewnet".

3. Select the mySewnet skill.

4. Depending on your device, touch "ENABLE TO USE" or "LAUNCH".

5. Touch "SETTINGS".

Ð	Add a Device					
E	Lists & Notes					
2	Reminders					
ō	Alarms & Timer	s				
\odot	Routines					
¢	Skills & Games		<	SKILLS &	GAMES	Q EN
See M	More 🗸		Dis	cover Catego	ries You	ır Skills
ø	Settings					
0	Activity					
0	Help & Feedbac	k				
Ţ	• *		=			
Home	e Communicate	Play Devices	More			
		←	SEA	RCH		7
		Search				
		mysewnet				
		i Result		Sort: Rele	vance 🗸	
		mySe	wnet			
1		"Ale:	ca, ask cre	ative icon 2 to	connect"	
		Smar	t Home			
	<	MYSEWNET	₫	< •	IYSEWNET	đ
	mySewne	t	mySeurnet	mySewnet		mySevenet
	SVP Worldwide Rated: Guidance Sug ☆☆☆☆☆ 0	igested	$\mathbf{\mathbf{\nabla}}$	SVP Worldwide Rated: Guidance Suggested 습습습습습 0		\bigtriangledown
		ENABLE TO USE			LAUNCH	
		Account linking available		Accou	nt linking available	
	mySewnet Skills enabled embroid	enable you to control your m ery machine that supports v	ySewnet- pice	mySewnet Skills enable enabled embroidery ma	you to control your chine that supports	mySewnet- voice
		•				
		۲. ۲۰۰۰	MYSEW	NC) [2	
		SVP Worldwide	iet	mysourced		
		kated: Guidance ☆☆☆☆☆	ouggested	∇		
		SETT	INGS	DISABLE SKILL		
			Account linking	available		

6. Touch "Link Account".

Once the "Link Account" is touched, Alexa will ask mySewnet for access.

7. Touch "Allow".

Note: If you are not signed in to mySewnet, a mySewnet login screen is shown instead.



When you get this screen you are ready to connect your machine.

8. Touch "Close" and return to the Alexa Home screen.

Once Alexa confirms that your **creative iconTM 2** is connected you are good to go.

The list of commands that can be used is growing continuously. A full list of commands will be available in "Voice Control – Commands List".

ACCOUNT LINKING
Your mySewnet account has been successfully linked.
What to do next:
Try saying
"^1,
Close this window to return to the skill page.
CLOSE

Set Up Your **creative icon™ 2** as a Smart Home Device

If you want to use Alexa Smart Home commands with your **creative iconTM 2**, you have to set it up as a smart home device.

Note: Before adding your creative iconTM **2** as a smart home device, make sure to link your Alexa and mySewnet accounts as described in the above sections (or <u>Link mySewnet to</u> Alexa Using the Alexa App).

- 1. In the Alexa app, open "Devices".
- 2. Touch "+".
- 3. Touch "Add Device".
- 4. In the list of smart home devices, scroll until you reach the device called "Other".



Make sure your **creative icon™ 2** is turned on and signed in to mySewnet.

5. Touch "DISCOVER DEVICES".

Alexa will start searching your home for your **creative** iconTM **2**. Once the search is complete, Alexa will notify you that a device is found.

6. Touch "SET UP DEVICE" to set up and connect your **creative icon™ 2** to Alexa Smart Home.

Once complete, Alexa will confirm the set up. Your **creative iconTM 2** is called "Machine 1".

7. Touch "DONE".

DONE

Give Your Machine a Nickname

You can give your machine a more personal name than the default "machine 1". This nickname is used when giving the smart home commands.

- 1. Go to "Devices".
- 2. Touch "All Devices".
- 3. From the list of devices, select "Machine 1".

- 4. Open "Settings".
- 5. Touch "Edit Name".
- 6. Enter the name you want to give your machine.

Note: Changing the name of the machine in the Alexa app does not change the machine name in your **creative iconTM 2** sewing and embroidery machine or in your mySewnet account.

DEVICES 🕈	ALL DEVICES
←	Jessica's Echo Dot Offline
Echo & Alexa All Devices	Alexa on this Phone Online
Hunches f Energy Dashboard	Machine 1
Favorites	
Add New Favorite	
•	
Groups	
Living Room	
Home Communicate Play Devices More	Home Communicate Play Devices More
← MACHINE 1 Device is unresponsive	← SETTINGS Device is unresponsive
← MACHINE 1 🏘 Device is unresponsive	SETTINGS Device is unresponsive Machine 1 Edit Name ABOUT
C MACHINE 1	← SETTINGS Device is unresponsive Machine 1 Edit Name ABOUT Connected Via SVP
← MACHINE 1 © Device is unresponsive	← SETTINGS Device is unresponsive Machine 1 Edit Name ABOUT Connected Via SVP
MACHINE 1 Device is unresponsive O	← SETTINGS Device is unresponsive Machine 1 Edit Name ABOUT Connected Via SVP Description Creative Icon 2 sewing machine. ClientID: 5682010656
MACHINE 1 Device is unresponsive Over is Off Mode SET	SETTINGS Device is unresponsive Machine 1 Edit Name A B O UT Connected Via SVP Description Creative Icon 2 sewing machine. ClientID: 5682010656 Type Other
MACHINE 1 Device is unresponsive U Power is Off Mode SET	 ✓ SETTINGS Device is unresponsive Machine 1 Edit Name ABOUT Connected Via SVP Description Creative Icon 2 sewing machine. ClientID: 5682010656 Type Other
MACHINE 1 Device is unresponsive U Power is Off Mode SET	 ✓ SETTINGS Device is unresponsive Machine 1 Edit Name ABOUT Connected Via SVP Description Creative Icon 2 sewing machine. ClientID: 5682010656 Type Other Enabled
C MACHINE 1	 ✓ SETTINGS Device is unresponsive Machine 1 Edit Name ABOUT Connected Via SVP Description Creative Icon 2 sewing machine. ClientID: 5682010656 Type Other Enabled
MACHINE 1 Device is unresponsive O	 ✓ SETTINGS Device is unresponsive Machine 1 Edit Name ABOUT Connected Via SVP Description Creative Icon 2 sewing machine. ClientID: 5682010656 Type Other Enabled

You have purchased a modern, updatable sewing and embroidery machine. As we regularly release firmware updates, it is possible that there may be some differences between the machine firmware and the firmware described in the user's guide. Consult your local authorized PFAFF® retailer, and be sure to visit our website at www.pfaff.com for the latest updates of the firmware and the user's guide.

We reserve the right to change the machine equipment and the assortment of accessories without prior notice, or make modifications to the performance or design. Such modifications, however, will always be to the benefit of the user and the product.

INTELLECTUAL PROPERTY CREATIVE ICON, MYSEWNET, PFAFF and PERFECTION STARTS HERE are trademarks of KSIN Luxembourg II, S.ar.l. Amazon and Alexa are trademarks of Amazon.com, Inc. or its affiliates.



