


INSTRUCTION MANUAL

HD 4552

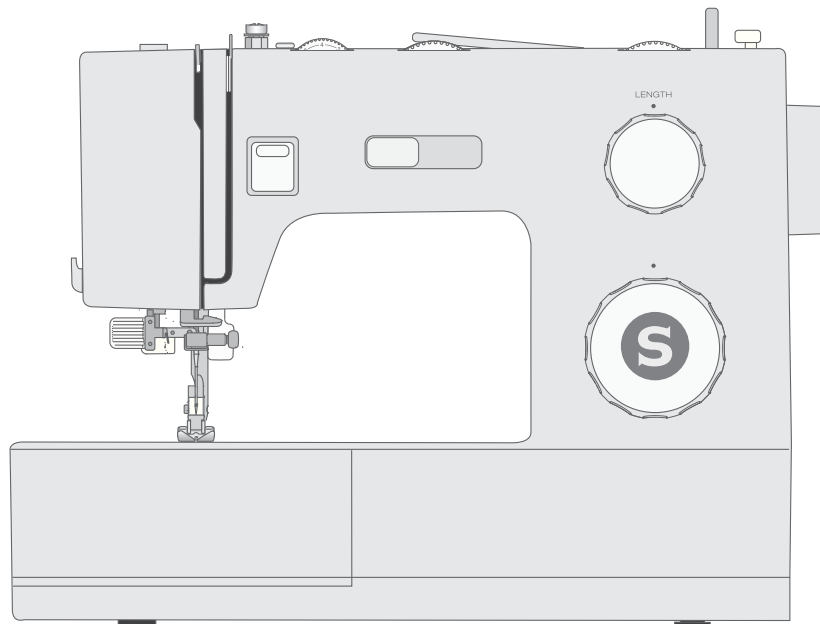

SINGER®

IMPORTANT SAFETY INSTRUCTIONS

Read all instructions before using this sewing machine.

When using an electrical appliance, basic safety precautions should always be followed, including the following:

Keep the instructions at a suitable place close to the machine. Make sure to hand them over if the machine is given to a third party.

This appliance is intended for use by adults. The appliance can be used with adult supervision by (i) children aged from 8 to 12 years and (ii) persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given instruction concerning use of the appliance in a safe way and understand the hazards involved. Cleaning and user maintenance shall not be made by children without supervision. It is not allowed for anyone to play with the machine. Children up to 8 years are not allowed to use the machine.

DANGER – TO REDUCE THE RISK OF ELECTRIC SHOCK:

- A sewing machine should never be left unattended when plugged in. The electrical socket, to which the machine is plugged in should be easily accessible. Always unplug this sewing machine from the electric outlet immediately after using and before cleaning, removing covers, lubricating or when making any other user servicing adjustments mentioned in the instruction manual.

WARNING –TO REDUCE THE RISK OF BURNS, FIRE, ELECTRIC SHOCK, OR INJURY TO PERSON:

- Do not allow to be used as a toy. Close attention is necessary when this sewing machine is used by or near children.
- Use this sewing machine only for its intended use as described in this manual. Use only attachments recommended by the manufacturer as contained in this manual.
- Never operate this sewing machine if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the sewing machine to the nearest authorized dealer or service center for examination, repair, electrical or mechanical adjustment.
- Never operate the sewing machine with any air openings blocked. Keep ventilation openings of the sewing machine and foot control free from the accumulation of lint, dust, and loose cloth.
- Keep fingers away from all moving parts. Special care is required around the sewing machine needle.
- Always use the proper needle plate. The wrong plate can cause the needle to break.
- Do not use bent needles.
- Do not pull or push fabric while stitching. It may deflect the needle causing it to break.
- Wear safety glasses.
- Switch the sewing machine off ("0") when making any adjustment in the needle area, such as threading needle, changing needle, threading bobbin, or changing presser foot, etc.
- Never drop or insert any object into any opening.
- Do not use outdoors.
- Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- To disconnect, turn all controls to the off ("0") position, then remove plug from outlet.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- The foot control is used to operate the machine. Never place other objects on the foot control.
- Do not use the machine if it is wet.
- If the LED lamp is damaged or broken, it must be replaced by the manufacturer or its service agent or a similarly qualified person, in order to avoid a hazard.
- If the cord connected with the foot control is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person, in order to avoid a hazard.
- Only use the external power supply (if applicable), the foot controller and cords supplied with your machine. No other can be used. If damaged or lost, make sure to replace with identical parts. Replacement should be carried out by the manufacturer, its service agent or a similarly qualified person, to ensure safety and avoid a hazard.

SAVE THESE INSTRUCTIONS

Federal Communication Commission Interference Statement

For the USA and Canada

Responsible party:

Singer Sourcing Limited LLC

300 2nd Ave. S, Suite 300, Nashville, TN 37201, USA

Product name:

SINGER® HD 4552 household sewing machine

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

To satisfy radio frequency exposure requirements, a separation distance of 8" (20 cm) or more should be maintained between this device and persons during device operation. To ensure compliance, operations at closer than this distance is not recommended. The built-in antenna used for this transmitter must not be co-located in conjunction with any other antenna or transmitter.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the authorized SINGER® retailer or an experienced radio/TV technician for help.

The included interface cable should be used in order to ensure compliance with the limits for a Class B digital device.



Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

TABLE OF CONTENTS

INTRODUCTION 1

Intended Use	1
Machine Overview.....	1
Needle Area Overview	2
Top of Machine	2
Overview Accessories.....	3
Included Accessories (Not Pictured)	3
Presser Feet	4
Stitch Overview	5
Utility Stitches	5
Decorative Stitches	5

GET STARTED..... 6

Unpack the Machine	6
Connect to the Power Supply	6
Pack Away After Sewing.....	6
Free Arm/Removable Accessory Tray	7
Presser Foot Lifter	7
Thread Knife	7
Spool Pin	8
Wind the Bobbin.....	9
Insert the Bobbin.....	9
Thread the Machine	10
Needle Threader	11
Bring up the Bobbin Thread.....	11
Needles.....	11
Important Needle Information.....	12
Selection Guide — Needle Size, Fabric, Thread.....	12
Change the Needle.....	13
Thread Tension	13
Sew without Feed Teeth.....	13
Presser Foot Pressure.....	14
Change the Presser Foot.....	14
Attaching the Edge/Quilting Guide	14

OPERATING YOUR MACHINE 15

Select a Stitch.....	15
Stitch Length.....	15
Stitch Width	16
Needle Position Dial.....	16
Sew in Reverse	16
Speed Control Lever	16

SEWING..... 17

Sewing	17
Start to Sew – Straight Stitch	17
Change Sewing Direction	17
Finish Sewing	17
Straight Stretch Stitch.....	18
Multi-Step Zigzag Stitch	18
Blind Hems	19
Slant Overedge Stitch.....	19
Closed Overlock Stitch.....	20
Darning and Mending.....	20
Repair Large Holes	20
Repair Smaller Holes.....	21
Repair Tears	21
One-Step Buttonhole.....	22
Corded Buttonhole.....	22
Buttonhole Balance.....	23
Button Sewing.....	23
Sew Zippers	24
Centered Zipper.....	24

MAINTENANCE..... 25


Cleaning the Machine	25
Cleaning the Bobbin Area.....	25
Cleaning under the Needle Plate.....	25
Troubleshooting.....	26
Technical Specification	29

INTRODUCTION

Intended Use

Optimal use and maintenance are described in these instructions. This product is not intended for industrial use. Additional assistance, by region, may be found on the web at www.singer.com.


Machine Overview

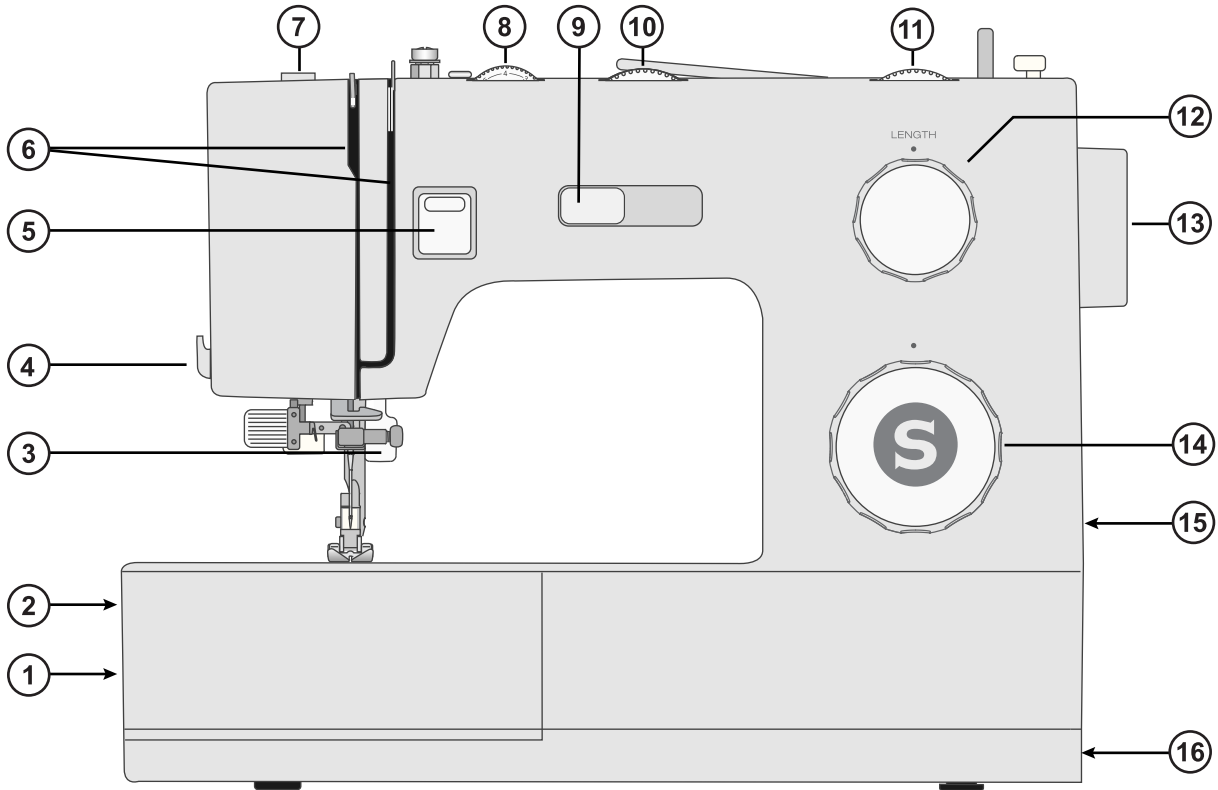

1. **Feed Teeth Lever** — move from side to side to engage or disengage the feed teeth. Positioned at the back of the free arm.
2. **Accessory Tray / Free Arm** — remove the accessory tray to use the free arm which makes it easier to sew, e.g., trouser hems and sleeves ([page 7](#)).
3. **Presser Foot Lifter** — used to raise and lower the presser foot ([page 7](#)).
4. **Thread Knife** — for trimming thread ends at the end of sewing ([page 7](#)).
5. **Reverse Lever** — press and hold to sew in reverse, e.g., when securing the beginning or ending of a seam.
6. **Threading Slots** — thread paths with tension discs and take up lever.
7. **Presser Foot Pressure** — controls the pressure, the presser foot exerts onto the fabric ([page 14](#)).
8. **Thread Tension Dial** — set the right tension for your stitch, thread and fabric ([page 13](#)).
9. **Speed Control Lever** — adjust the sewing speed ([page 16](#)).
10. **Needle Position Dial** — Controls the position of the needle for straight stitch sewing ([page 16](#)).
11. **Stitch Width Dial** — controls the distance that the needle moves from side to side, making stitches narrower or wider as desired ([page 16](#)).
12. **Stitch Length Dial** — stitch length dial controls the distance that the feed teeth move, making stitches shorter or longer as desired ([page 15](#)).
13. **Hand Wheel** — used to manually control the movement of the needle and the thread take-up lever.
14. **Stitch Selection Dial** — Turn the dial to the left or right until the stitch you want to sew is lined up with the dot marking above the dial ([page 15](#)).
15. **Buttonhole Balance** — If needed, the stitch density of the left buttonhole column can be adjusted ([page 23](#)).
16. **Electrical Cord Outlet and On/Off Button** — Connect the electrical cord and press the ON/OFF switch to "I" to turn on power and light ([page 6](#)).


Needle Area Overview

1. **Needle Plate** — provides a flat area around presser foot for sewing. Guide lines make it easy to guide the fabric straight when sewing.
2. **Feed Teeth** — feed the fabric under the presser foot when sewing.
3. **Presser Foot** — holds fabric against feed teeth which draws fabric under the presser foot as you sew.
4. **Presser Foot Holder Screw** — loosen the screw to remove the presser foot holder.
5. **Presser Foot Holder** — holds the presser foot.
6. **Presser Foot Release Lever** — press this lever to release the presser foot from the holder page 14).
7. **Buttonhole Lever** — used for buttonhole sewing.
8. **Built-in Needle Threader** — thread the needle quickly and easily.
9. **Presser Foot Bar** — accommodates the presser foot holder.
10. **Needle Clamp Screw** — secures the needle.
11. **Thread Guide** — helps maintain thread flow when sewing.
12. **Needle Thread Guide** — helps maintain thread flow when sewing.
13. **Bobbin Cover** — protects the bobbin while sewing.
14. **Bobbin Cover Release Button** — push to open the bobbin cover.

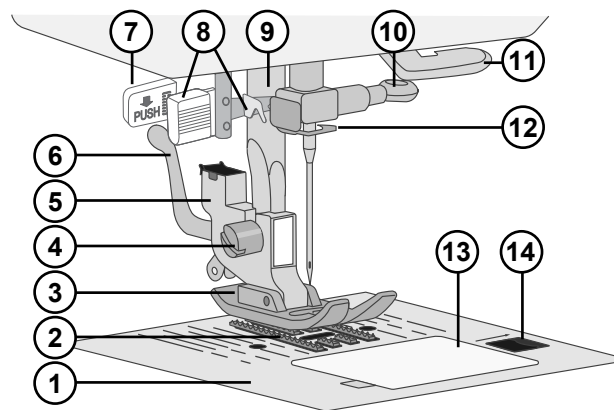


Top of Machine

1. Bobbin winding tension disc
2. Thread guides
3. Handle
4. Spool pin
5. Hole for auxiliary spool pin
6. Bobbin winding spindle
7. Bobbin winding stopper
8. Thread tension discs
9. Thread take-up lever

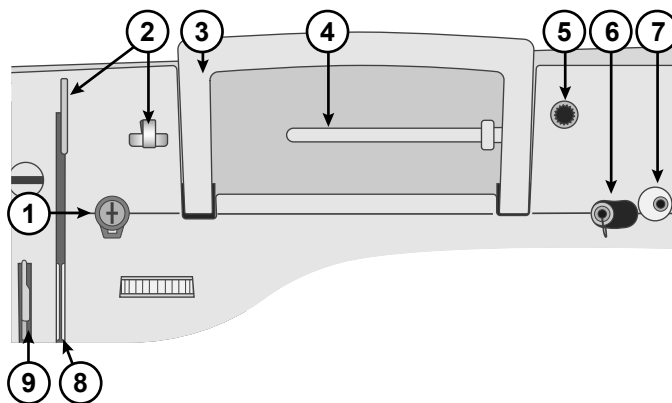


Overview Accessories

 


Bobbin x3 — Only use the type of transparent bobbins delivered with your machine (SINGER® Class 15 transparent bobbins). One of the bobbins is inserted in the machine upon delivery.



 
Felt Pad — Used to cushion the spool of thread when using the Auxiliary Spool Pin.



 
Spool Cap — Two sizes (large and small) for various thread spool styles.



 Auxiliary Spool Pin — For sewing with large thread spools or when using specialty threads.



Brush and Seam Ripper — Used to remove stitches/brush off lint.

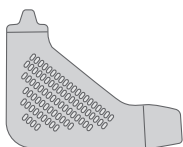

L-Screwdriver — Used to remove the needle plate, presser foot holder or needle screw.



Edge/Quilting Guide — Used for straight and accurate sewing, e.g., when quilting. Insert the guide into the slot at the back of the presser foot holder. Adjust the position to fit your project.



Clearance Plate — When sewing over seams in extra heavy fabric, the presser foot can tilt as it rides over the seam. The needle can hit the tilted foot and break. Use the clearance plate to balance the level of the foot as you sew over the thick area.

Included Accessories (Not Pictured)

- Needles
- Foot control and power cord

 
Presser Feet



All Purpose Foot


(attached on the machine upon delivery)

This foot is used for general sewing on most types of fabric. The bottom of the foot is flat, so that the fabric is held down firmly against the feed teeth while sewing. It also has a wide slot so that the needle can move from left to right, depending on which stitch you sew.




Zipper Foot

 This foot is used for inserting zippers. Attach the foot to the presser foot holder on either side of the foot, depending on which side of the zipper is being sewn. The Zipper Foot can also be used to create and insert piping.




One-Step Buttonhole Foot

This foot allows you to make perfectly sized buttonholes for your button. It has a space at the back for a button, used to set the size of the buttonhole. The machine will automatically sew a buttonhole to fit that button size.

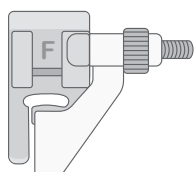

Blind Hem Foot

 The Blind Hem Foot is used for sewing blind hems in fashions and home decor. There is an adjustable guide with an extension at the front, used to guide the fold of the hem while stitching.



Even Feed Foot

The Even Feed Foot, sometimes called a Walking Foot, is used for sewing several layers of fabric, especially when quilting. It is also great for sewing fabrics with nap or pile to keep them from shifting as you sew.



Non-Stick Foot

The Non-Stick Foot makes it possible to sew fabrics such as leather, plastic, vinyl and oilcloth with ease.

These fabrics can get stuck under a metal presser foot, but the Non-Stick Foot has a slick surface on its underside, so that fabric will feed smoothly.

 
 
Stitch Overview

Utility Stitches

The stitches described in the below chart are utility stitches, used mainly for utility sewing.

Stretch stitches are marked with (*) in the stitch chart below.

When sewing, use a thread tension between 3–5. Always test sew on a piece of scrap fabric, and adjust the tension if necessary.

				Application
	Straight Stitch Center Position			The basic stitch used for sewing. The most common use for a straight stitch is to sew two pieces of fabric together.
	Straight Stretch Stitch	S1 (*)		Stronger than a regular straight stitch, on stretch knit fabrics, because it locks three times — forward, backward and forward again. Use it to reinforce seams of sportswear and for curved seams which take a lot of strain.
	Zigzag Stitch			A very versatile stitch for decorative sewing, applique and attaching ribbons and trims.
	Multi-Step Zigzag Stitch	(*)		Finish seam allowances to prevent the fabric from unravelling. When seam finishing, the smaller step of the stitches will help keep fabric more flat than a regular zigzag. It can also be used for mending tears and sewing elastic.
	Reinforced Zigzag Stitch	S1 (*)		For joining fabric edge to edge or overlapping in leather. For decorative sewing.
	Overlock Stitch	S1 (*)		Sew seam and overcast in one step along the edge or trim later. For medium and medium/heavy stretch fabrics.
	Blind Hem Stitch			Sew hems that are practically invisible from the right side of the fabric. It is used for skirts, dresses, trousers, curtains etc, made with non-stretch fabrics.
	Stretch Blind Hem Stitch	(*)		Sew hems that are practically invisible from the right side of the fabric. It is used for garments and other projects made with stretch knit fabrics.
	Slant Overedge Stitch	S1 (*)		Seam and overcast in one step along the edge or trim later. For medium and heavy stretch fabrics.
	Closed Overlock Stitch	S1 (*)		Sew decorative hems and overlapped seams, belts and bands. For medium/heavy stretch fabrics.
	Honeycomb Stitch	S1 (*)		For elastic insertion, decorative stitching, smocking, couching and hemming.
	Buttonhole			Sew buttonholes on home decór, garments, crafts and more.

Decorative Stitches

Your machine also features decorative stitches. The stitches not described in the previous chart are decorative stitches. When sewing the decorative stitches, make sure to use a stabilizer underneath the fabric for better appearance. Use a thread tension between 3–5. Always test sew on a piece of scrap fabric, and adjust the tension if necessary.

GET STARTED

Unpack the Machine

1. Place the box on a steady, flat surface. Lift the machine out of the box, and remove the packaging.
2. Remove all outer packing material and the plastic bag.
3. Wipe off the machine with a dry cloth to remove any lint and/or excess oil around the needle area.

Note: Your sewing machine is adjusted to provide the best stitch result at normal room temperature. Extreme hot and cold temperatures can affect the sewn result.

Connect to the Power Supply

Among the accessories you will find the power cord and the foot control.

Note: Consult a qualified electrician if in doubt as how to connect the machine to the power source. Unplug the power cord when the machine is not in use.


On the bottom right side of the sewing machine, you find the connecting sockets and the ON/OFF button.

1. Connect the power cord to the rear socket on the bottom right side of the machine (A). Plug the cord into the wall socket.
2. Connect the foot control cord to the front socket on the bottom right side of the machine (B).
3. Press the ON/OFF switch (C) to "I" to turn on power and light.

The sewing speed is regulated by pressing the foot control.

Note: Your machine will automatically go into standby mode after a duration of time, due to inactivity. Press the foot control and the machine will be activated to be in normal mode again.

Note: After turning off the machine, residual power may remain in the machine. This could cause the light to stay on for a few seconds while the power is consumed. This is normal for an energy efficient appliance.

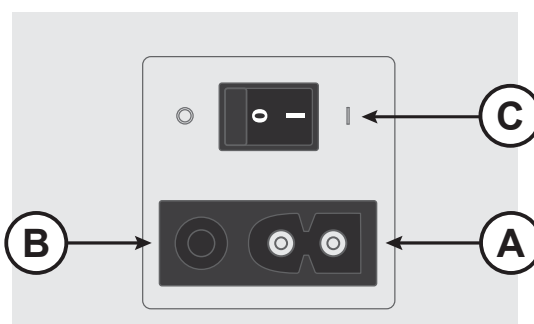

For the USA and Canada

This sewing machine has a polarized plug (one blade wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not modify the plug in any way.

Pack Away After Sewing

1. Switch the main switch off. After switching off, residual power may still remain in the machine. This may cause the light to stay on for a few seconds while the power is consumed. This is normal behavior for an energy efficient appliance.
2. Unplug the cord from the wall socket and then from the machine.
3. Wind the cord around the foot control for easy storage.
4. Place all accessories in the accessory tray. Slide the tray on to the machine around the free arm.
5. Place the foot control and cord in the space above the free arm.
6. Place the cover on the machine to help protect it from dust and lint.


Free Arm/Removable Accessory Tray

Store presser feet, bobbins, needles and other accessories in the accessory tray so that they are easily accessible.

Keep the accessory tray on the machine to provide a larger, flat work surface.

Use the free arm to facilitate sewing trouser legs and sleeve hems. To use the free arm, slide off the accessory tray. When attached, a hook keeps the accessory tray securely attached to the machine. Remove the tray by sliding it to the left.


When the accessory tray is removed from the machine, open the lid by putting a finger at the left side of the accessory box (A) and carefully pull it open. Push the lid closed before putting the tray back onto the machine.

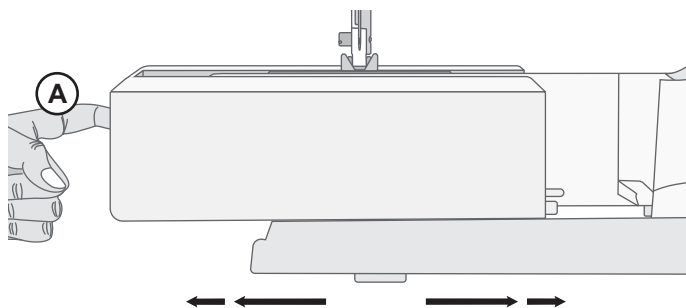

Presser Foot Lifter


The presser foot lever is located at the back of the sewing machine head. The lever is used to raise and lower the presser foot. Raise the lever up for machine threading and changing presser foot, lower it for sewing.

By raising the presser foot lever and then pressing it farther upwards, the lift height of the presser foot is increased to an extra height allowing you to slide very thick projects under the foot.

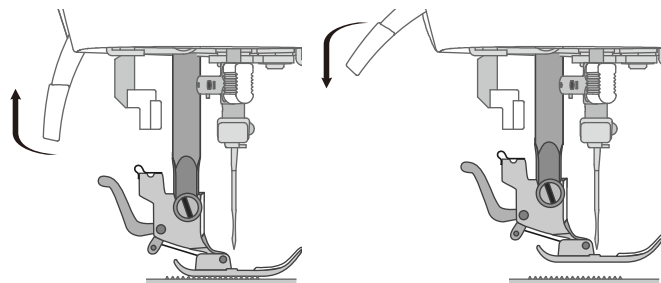

Thread Knife

To use the thread knife, pull the thread from back to front as illustrated. Doing this will leave the thread ends long enough so that the needle doesn't become unthreaded when you start to sew again.

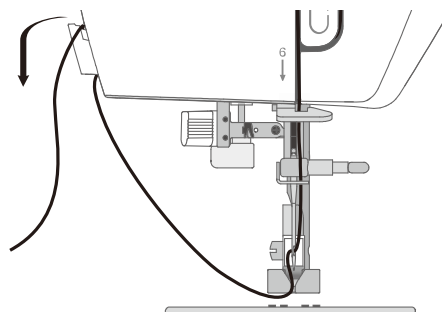


Spool Pin

Your machine has two spool pins, a main spool pin and an Auxiliary Spool Pin. The spool pins are designed for all types of thread. The main spool pin is used in a horizontal position (the thread reels off the spool) and the Auxiliary Spool Pin in a vertical position (the thread spool rotates). Use the horizontal position for normal threads and the vertical position for large spools or specialty threads.

Main Spool Pin


Place the thread spool on the spool pin. Make sure that the thread reels off the spool counter clockwise and slide on a spool cap. Use a spool cap slightly larger than the thread spool. For narrow thread spools (A), use a smaller spool cap in front of the spool. For large thread spools (B), use a larger spool cap in front of the spool. The flat side of the spool cap should be pressed firmly against the spool. There should be no space between the spool cap and the thread spool.

Note: Not all thread spools are manufactured in the same way. If you experience problems with the thread, turn it in the opposite way or use the vertical position.

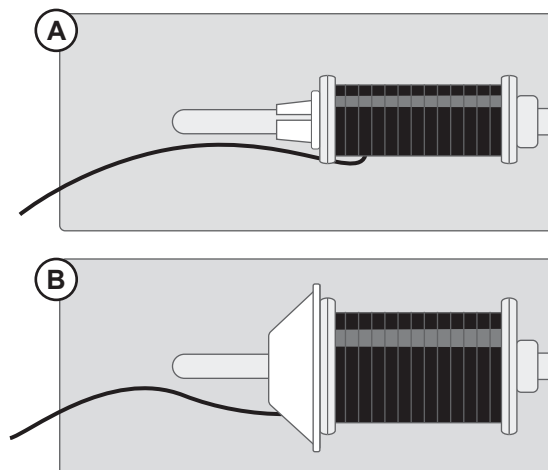


Auxiliary Spool Pin

The Auxiliary Spool Pin is used when winding a bobbin thread from a second spool of thread or when sewing with large spools or with specialty threads. Insert the Auxiliary Spool Pin into the designated hole at the top of the machine. Place a felt pad under the thread spool. This is to prevent the thread from reeling off too fast. Do not place a spool cap on top of the spool pin as that would prevent the spool from rotating.

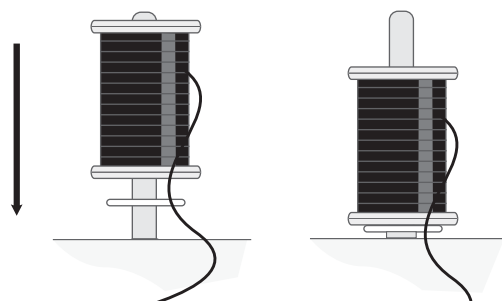

Wind the Bobbin

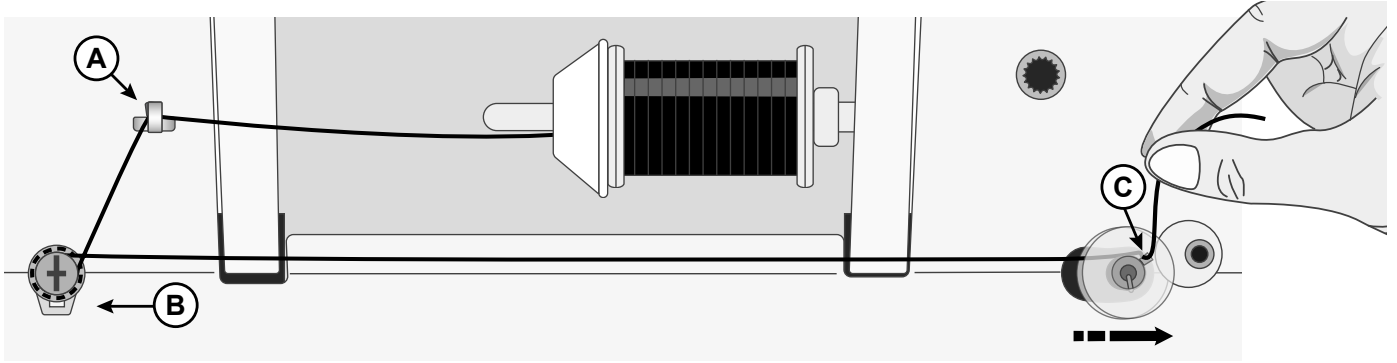

1. Place the thread spool on the spool pin. Slide a spool cap firmly against the spool.
2. Place the thread into the thread guide (A) from the back to the front. Bring the thread clockwise around the bobbin winding tension disc (B), making sure that the thread is pulled snugly between the discs.
3. Thread through the hole in the bobbin (C) from the inside to the outside.
4. Place the bobbin on the bobbin winding spindle. Make sure the bobbin is pushed down firmly.
5. Push the bobbin winding spindle to the right. Hold the thread end, and press the foot control to start winding.

After a few turns, take your foot off the foot control to stop winding. Cut the excess thread tail above the bobbin, making sure to trim it close to the bobbin. Step on the foot control to resume winding. When the bobbin is full, the bobbin winding will slow down and stop automatically.

When the winding spindle is pushed to the right, a bobbin winding icon is shown on the display.


6. Push the bobbin winding spindle to the left. Remove the bobbin and cut the thread.

Note: When the bobbin winding spindle is pushed to the right, the machine will not sew. Make sure to push the bobbin spindle back to the sewing position (left) before sewing.

Insert the Bobbin

Note: Make sure that the needle is fully raised and the machine is turned off before inserting or removing the bobbin.


1. Remove the bobbin cover (A) by pushing the small button (B) to the right of the cover towards the right.
2. Insert the bobbin in the bobbin case with the thread running in a counterclockwise direction.
3. With the tip of your finger on the bobbin, pull the thread slightly to the right and under the guide (C) then towards the left.
4. Continue pull the thread until it slips into the notch (D).
5. Pull out about 15cm (6 inches) of thread and attach the bobbin cover.

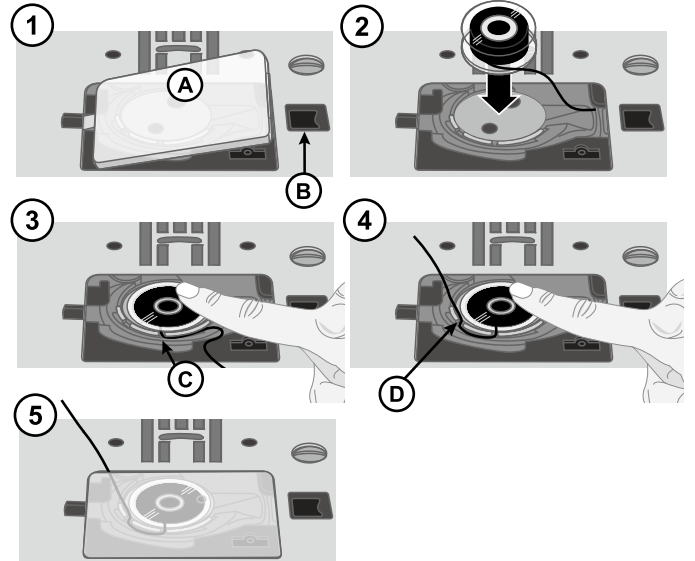


Thread the Machine

Important! Make sure that the presser foot is raised and the needle is in its highest position by turning the handwheel toward you. This is very important to help ensure that the machine is correctly threaded. Not doing so can result in poor stitch quality when you start to sew.

1. Place the thread on the spool pin and fit the appropriately sized spool cap.
2. Pull the thread into the thread guide (A) from back to the front and thread guide (B) from back to front. Make sure the thread is placed correctly in the tension disk.
3. Pull the thread between the tension discs (C).
4. Continue bringing the thread down through the right threading slot, around the U-turn, then back upwards through the left threading slot.
5. Bring the thread from the right into the take-up lever (D) and down in the left-hand threading slot, into the lower thread guide (E) and to the needle thread guide (F).
6. Thread the needle from front to back.

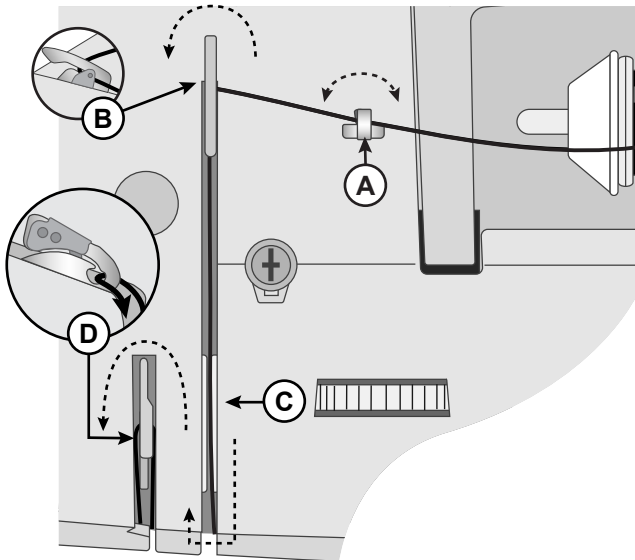

Machine from above

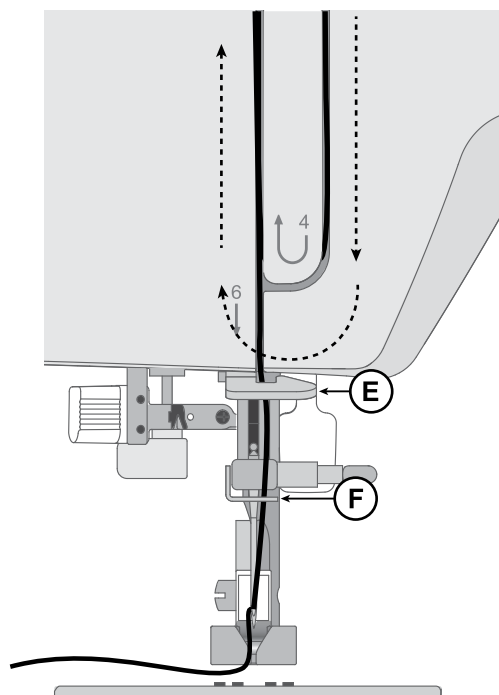


Machine from front

Needle Threader

The built-in needle threader allows you to thread the needle quickly and easily.

The needle must be in its highest position to use the built-in needle threader. Turn the hand wheel towards you until the needle is in its highest position. It is also recommended that you lower the presser foot.


- Use the handle (A) to pull the needle threader all the way down. The metal flanges cover the needle. A small hook will pass through the needle eye (B).
- Place the thread from the back over the thread guide (C) and under the small hook (D).
- Let the needle threader gently swing back. The hook pulls the thread through the needle eye and forms a loop behind the needle. Pull the thread loop out behind the needle.
- Raise the presser foot and place the thread under it.
- Pull out about 6–8" (15–20cm) of thread beyond the needle eye. This will prevent the machine from coming unthreaded when you start to sew.

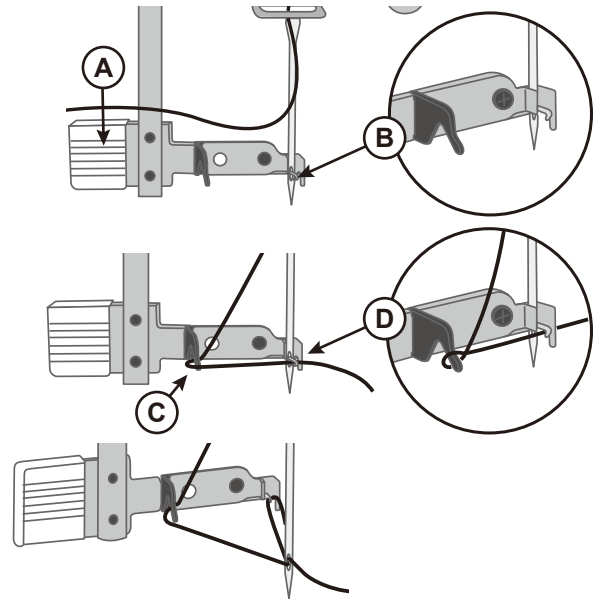

Note: The needle threader is designed to be used for size 70–110 needles. You cannot use the needle threader for size 60 needles or smaller, wing needles or twin needles. There are also some optional accessories that require manual threading of the needle. When threading the needle manually, make sure that the needle is threaded from front to back.

Bring up the Bobbin Thread

1. Hold the upper thread with your left hand.
2. Turn the handwheel towards you, one full turn, lowering and raising the needle.
3. Gently pull the upper thread to bring the bobbin thread up through the needle plate.
4. Place both threads under the presser foot and to the back.

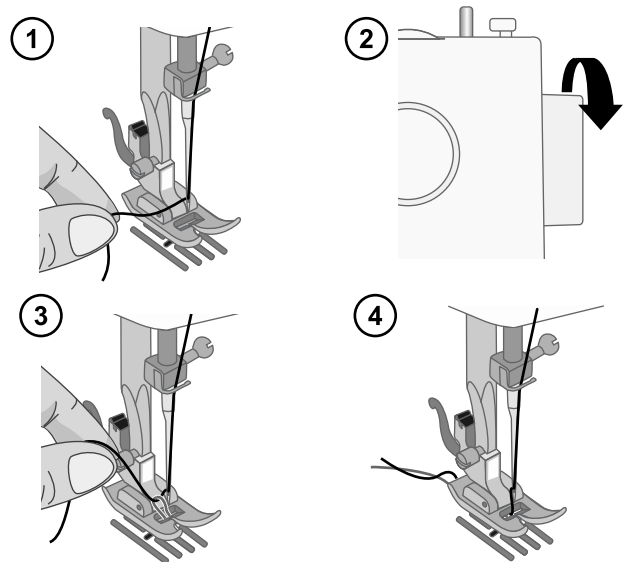

Needles

The sewing machine needle plays an important role in successful sewing. Use only quality needles. We recommend needles of system 130/705H. The needle package included with your machine contains needles of the most frequently used sizes.



Be sure to match the needle to the thread you are using. Heavier threads require a needle with a larger needle eye. If the needle eye is too small for the thread the needle threader may not work properly.



Universal Needle

Universal needles have a slightly rounded point and come in a variety of sizes. For general sewing in a variety of fabric types and weights.



Stretch Needle

Stretch needles have a ball point and a special scarf to eliminate skipped stitches when there is a flex in the fabric. For knits, swimwear, fleece, synthetic suedes and leathers.



Denim Needle

Denim needles have a sharp point to penetrate tightly woven fabrics without deflecting the needle. For canvas, denim, microfibers.



Embroidery Needle

Embroidery needles have a special scarf, a slightly rounded point and a slightly larger eye to avoid damage to thread and materials. Use with metallic and other specialty threads for embroidery and decorative sewing.


Important Needle Information



Change the needle often. As a general rule, needles should be changed every 6–8 hours of actual stitching time.

Always use a straight needle with a sharp point and make sure the point is not bent or damaged (A).

A damaged needle (B) can cause skipped stitches, breakage or snapping of the thread. It can also damage the needle plate.

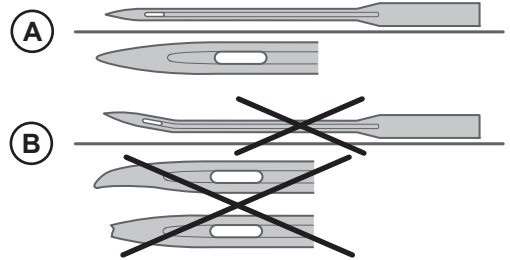


Selection Guide — Needle Size, Fabric, Thread

Needle Size	Fabric	Thread
70–80 (9–11)	Lightweight fabrics: Fine cotton, voile, silk, muslin, interlock, tricot, jersey, crepe, polyester, chiffon, organza, organdy	Light duty all purpose thread
80–90 (12–14)	Medium weight fabrics: Quilting cotton, satin, double knit, lightweight wool, rayon, polyester, lightweight linen	Use polyester threads on synthetic fabrics and all-purpose or cotton thread on natural fabrics for best results.
90 (14)	Medium weight fabrics: Firm woven, medium weight linen, cotton/polyester blend, terrycloth, chambray, double knit	
100 (16)	Heavy weight fabrics: Canvas, wool, denim, home decor, fleece, heavy knit	
110 (18)	Heavy weight fabrics: Coat weight wool, upholstery fabrics	Heavy duty thread for needle, with all-purpose thread for the bobbin.

Change the Needle

Note: Before you begin changing the needle, it can be helpful to place a small piece of paper or fabric underneath the needle area, over the hole in the needle plate, so that the needle doesn't accidentally fall down into the machine.

1. Loosen the needle clamp screw. If it feels tight, use the screwdriver from your accessories to aid with loosening the screw.
2. Remove the needle.
3. Push the new needle upwards into the needle clamp with the flat side away from you.
4. When the needle will go up no further, tighten the screw securely.

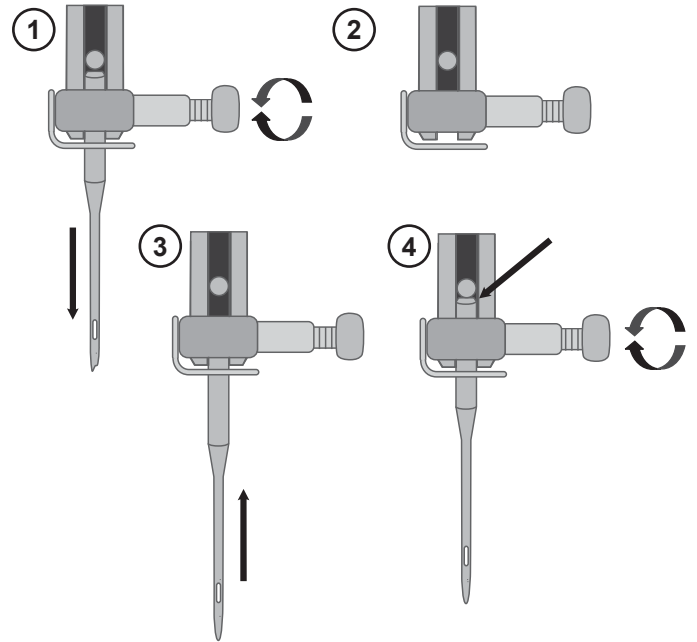

Thread Tension


To set the thread tension, turn the dial on top of the machine. Depending on the fabric, thread, etc, the tension may need to be adjusted. For the best stitch appearance and durability, make sure the needle thread tension is correctly adjusted. For general sewing, the threads evenly meet between the two layers of fabric (A).

If the bobbin thread is visible on the top side of the fabric, the needle thread tension is too tight (B). Reduce the needle thread tension.

If top thread is visible on the underside of the fabric, the needle thread tension is too loose (C). Increase the needle thread tension.

For decorative stitches and buttonholes, the top thread should be visible on the underside of the fabric.

Make a few tests on a scrap piece of the fabric you are going to sew and check the tension.

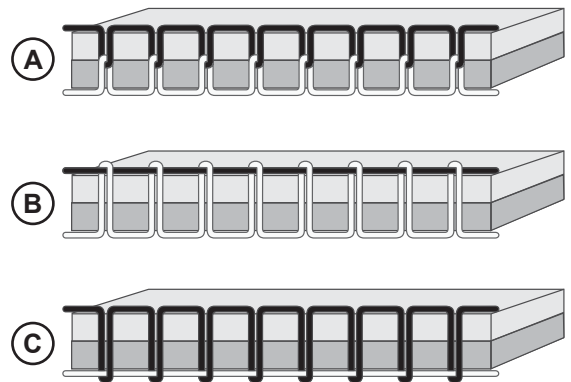


Sew without Feed Teeth

When sewing on buttons or doing other sewing techniques where you don't want the fabric to feed, you need to lower the feed teeth.

The feed teeth lever is found at the back of the free arm.

1. Lower the feed teeth by moving the lever to the "Feed Teeth Down" position.
2. Raise the feed teeth by moving the lever to the "Feed Teeth Up" position.

Note: The feed teeth will not raise immediately when the lever is switched. Turn the hand wheel toward you one full turn or start sewing to re-engage the feed teeth.

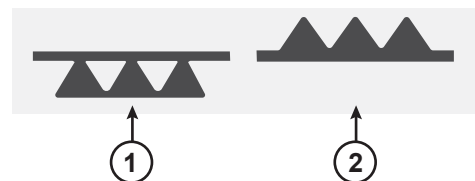


Presser Foot Pressure

The presser foot pressure is used to control the amount of pressure that the presser foot exerts onto the fabric, to ensure smooth feeding of the fabric while sewing. The presser foot pressure has been pre-set to the standard value. Though it needs no adjustment for most fabrics, it can be adjusted for very thick or very thin fabric - increase (turn towards +) for heavy weight fabrics, decrease (turn towards -) for lightweight fabrics.

Note: If the dial is turned counterclockwise too much, it could come off. If this happens, simply replace the dial and turn it clockwise until it stays in place.


Note: If the dial is turned clockwise until it comes to a stop, it has reached the maximum pressure available. Do not try to turn the dial any further!

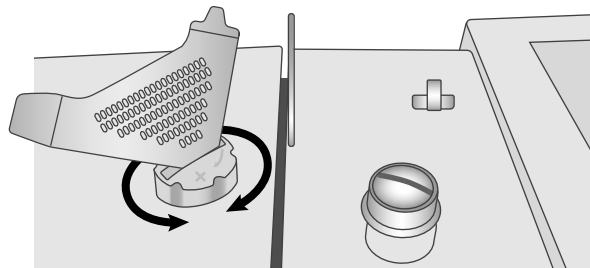

Change the Presser Foot

1. Make sure that the needle is in the highest position and the presser foot is lifted. The presser foot release lever extends out the back of the presser foot holder. Press this lever to release the presser foot.
2. To attach a presser foot to the holder, place the desired presser foot with its pin directly under the slot in the presser foot holder. Lower the presser foot lifter and the presser foot will snap into place.

Note: If you find it difficult to place the presser foot in the correct position, keep the release lever pressed while lowering the presser foot. Use your thumb to carefully guide the presser foot into the correct position and it will snap into place.

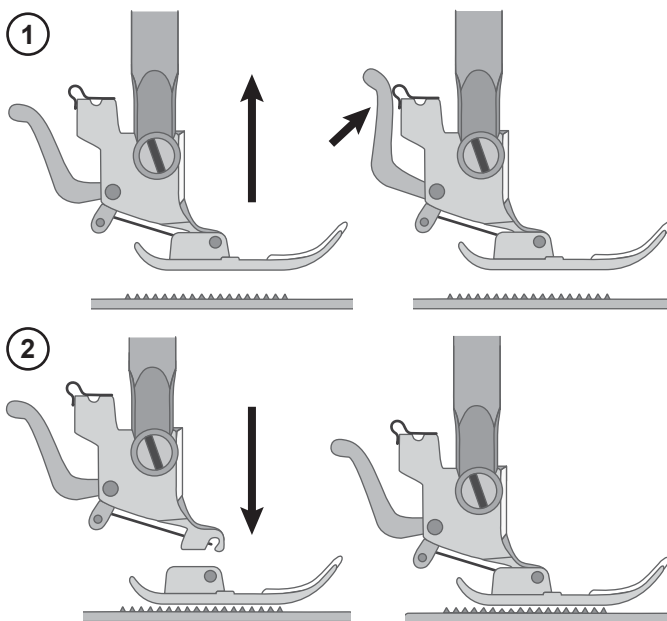


Attaching the Edge/Quilting Guide

Attach the edge/quilting guide in the slot (A) as illustrated. Adjust as needed for hems, pleats, quilting, etc.



Attach the edge/quilting guide in the slot (A) as illustrated. Adjust as needed for hems, pleats, quilting, etc.

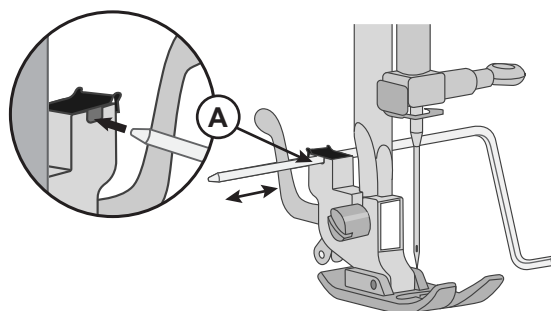

OPERATING YOUR MACHINE


Select a Stitch

Raise the needle to its highest position.


Turn the stitch selector dial (A) to the left or right until the stitch you want to sew is lined up with the dot marking above the dial (B). The dial should “click” in place for the stitch to be properly selected. Each turn of the dial displays three stitch menu choices: left, center (S1) and right (S2).

Use non-stretch stitches when sewing woven fabrics, leather or vinyl and stretch stitches when using stretch fabrics (see Stitch Overview, [page 5](#)), to find out which stitches are stretch stitches).

Note: Always raise the needle above the fabric and presser foot before you turn the stitch selection dial.

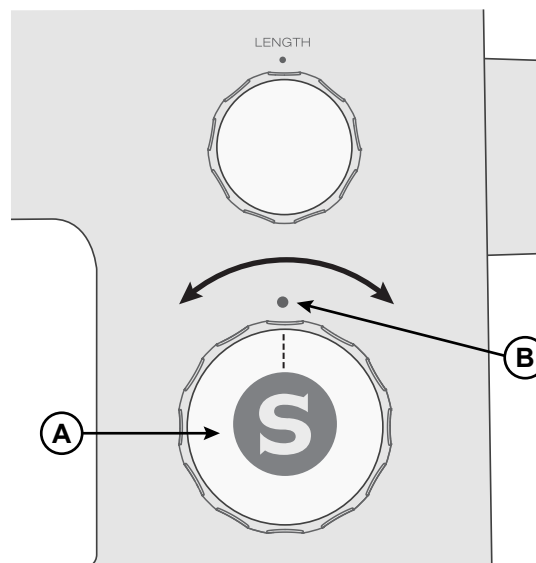

Stitch selection dial

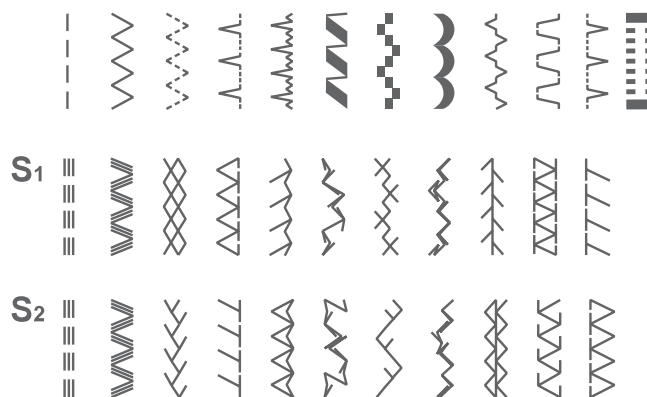





Stitch menus

Stitch Length


Turn the stitch length dial until the desired stitch length corresponds with the dot marking above the dial. The higher the number, the longer the stitch. The stitch length can be varied from 0-4mm (the numbers on the selection wheel correspond to the stitch length in mm).

Use a longer stitch length when sewing heavier weight fabrics or when using a thicker needle or thread. Use a shorter stitch length when sewing lighter weight fabrics or when using a finer needle or thread.

The stitches on stitch menu S1 and S2 have a fixed stitch length. For those stitches, set the stitch length dial to S1 or S2.

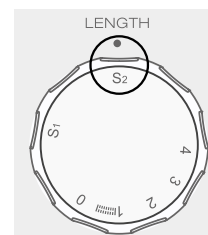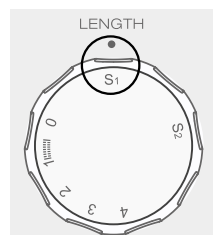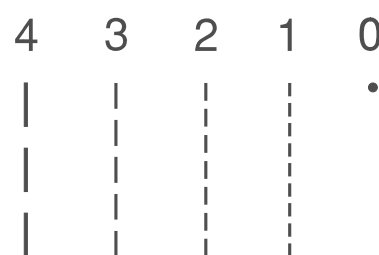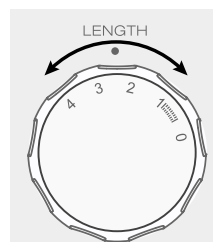

 When sewing buttonholes, the stitch length dial should be set within the buttonhole area.




Stitch Width

Turn the stitch width dial to set the desired stitch width.

The higher the number, the wider the stitch. A center straight stitch is set to "0" stitch width. The stitch width can be varied from 0-6mm (the numbers on the selection wheel correspond to the stitch width in mm).


Note: Before you turn the stitch width dial, raise the needle to its highest position, otherwise it may bend or break.

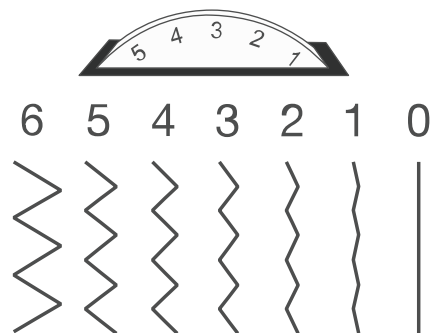

Needle Position Dial

The needle position dial is used to set the position of the needle for straight stitch sewing. Changing the needle position can be useful when topstitching, creating and inserting piping and more. For most general sewing use the center position.


For twin needle stitching, set the needle position to center.

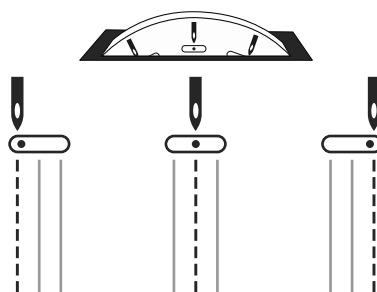

Sew in Reverse

Press the reverse lever down to sew in reverse.


The machine sews in reverse only as long as the reverse lever is pressed down.

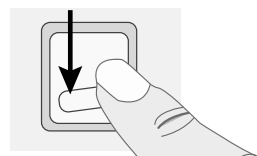

Speed Control Lever

All stitches in your sewing machine have a pre-set, recommended sewing speed.

You can adjust the speed using the Speed Control Lever. Slide the lever to the left to decrease the speed and to the right to increase the speed. You cannot select a higher speed than the default max speed for the selected stitch.

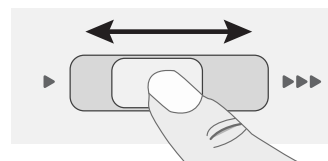





SEWING

Sewing

Next to each stitch or sewing technique described in this section of the manual is a chart showing the recommended settings and presser foot. See sample of the chart to the right.

Note: Some fabrics have a lot of excess dye which can cause discoloration on other fabric but also on your sewing machine. This discoloring may be very difficult or impossible to remove. Fleece and denim fabric in especially red and blue often contain a lot of excess dye. If you suspect that your fabric/ready-to-wear garment contains a lot of excess dye, always pre-wash it before sewing to avoid the discoloring on your machine.

    Note: For best sewing result, use the same thread on top and bobbin. If sewing with specialty/decorative threads, use regular sewing thread in the bobbin.

					
(A)	(B)	(C)	(D)	(E)	(F)

- A. Stitch
- B. Presser foot
- C. Needle Position
- D. Stitch width in mm
- E. Stitch length in mm
- F. Thread tension

Start to Sew – Straight Stitch

 
 
 
Set your machine for straight stitch (see chart to the right).

Raise the presser foot and position the fabric under it, next to a seam allowance guide line on the needle plate. There are several guide lines on the needle plate. Place the fabric along the 3/4" (10mm) guide line.


Place the top thread underneath the presser foot.

Lower the needle to the point where you want to start. Bring the threads toward the back and lower the presser foot. Press the foot control. Gently guide the fabric along the seam guide letting the machine feed the fabric (A). If the bobbin thread isn't pulled up, it will be automatically as you start to sew.

To secure the beginning of a seam, press down and hold the reverse lever. Sew a few reverse stitches. Release the reverse lever and the machine will sew forward again (B).

					
			0	2-4	3-5

Set up for straight stitch

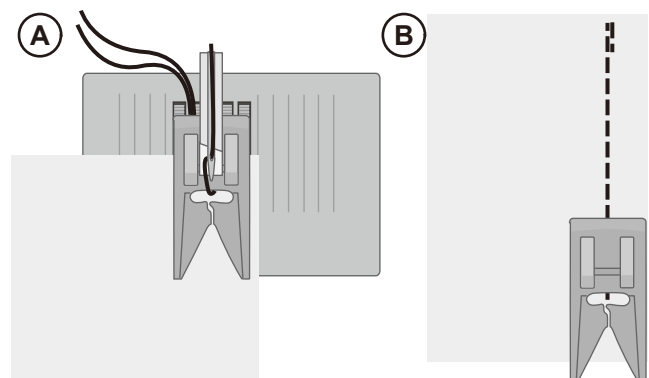


Change Sewing Direction

To change sewing direction, stop the machine with the needle down into the fabric.

Raise the presser foot.

Pivot the fabric around the needle to change sewing direction as desired. Lower the presser foot and continue sewing in the new direction.

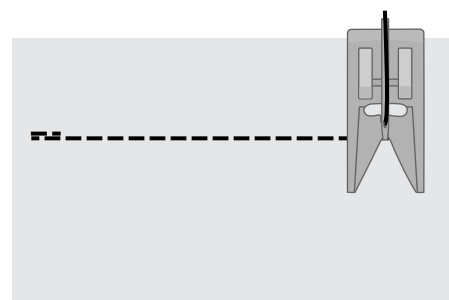

Finish Sewing

Press down and hold the Reverse lever and sew a few stitches in reverse when you reach the end of the seam. Release the button and sew forward again to the end of the seam. This will secure the seam so the stitches don't unravel.

Turn the handwheel toward you to raise the needle to its highest position. Raise the presser foot and remove the fabric, pulling the threads to the back.

Pull the threads up and into the thread knife so that the threads are cut the proper length and your needle won't come unthreaded when you start the next seam.

Straight Stretch Stitch

This stitch is stronger than regular straight stitch, due to the fact that it is a triple and elastic stitch. The straight stretch stitch can be used for heavy stretch fabrics, for crotch seams which are subject to considerable strain and for topstitching heavy fabrics.

Carefully guide the fabric while sewing as the fabric moves back and forth.

					
			0	2-3	3-5

Set up for Straight Stretch Stitch



Multi-Step Zigzag Stitch

Multi-step zigzag stitch is used to overcast raw edges. Make sure the needle pierces the fabric on the left side and overcasts the edge on the right side.

The stitch can also be used as an elastic stitch to allow seams to stretch when sewing knit fabrics.

					
			3-5	1	3-5

Set up for multi-step zigzag stitch




Blind Hems

The blind hem stitch is used to make invisible hems on skirts, trousers and home décor projects. There are two types of blind hems; one is recommended for medium to heavy woven fabric (1), the other for medium to heavy stretch fabric (2).


- Finish the raw edge of the hem if sewing on a woven fabric. There is no need to finish the raw edge first on most knits.
- Fold and press the hem allowance to the wrong side.
- Fold the hem back on itself so approximately 3/8" (1 cm) of the finished edge extends beyond the fold. The wrong side of your project should now be facing up.
- Place the fabric under the presser foot so that the fold runs along edge guide (A).
- When the needle swings into the fold it should catch a small amount of fabric. If the stitches are visible on the right side, adjust edge guide (A) by turning the adjusting screw (B) until the stitch that catches the hem just barely shows.

(1)	(2)			3-4	1-2	3-5


Set up for blind hem

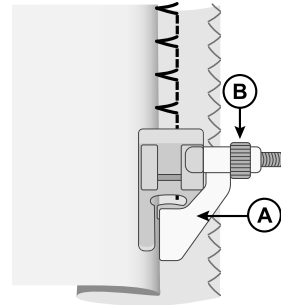

Woven fabric

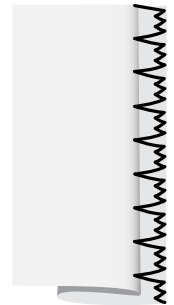

Stretch fabric

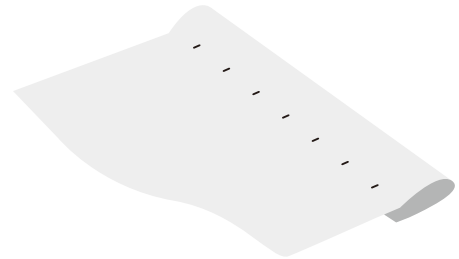

Right side of fabric

Slant Overedge Stitch



The slant overedge stitch sews the seam and overcasts the edge all at one time, perfect for stretch fabrics. This stitch is more elastic than normal seams, very durable and quickly sewn.

Place the fabric under the presser foot aligning the edge of the presser foot with the edge of the fabric. Once the seam is finished, trim excess fabric outside the seam.

Tip: Use the Blind Hem foot to sew at the very edge of the fabric. Adjust the extension on the foot, and let it guide along the fabric edge. Always test sew on a piece of scrap fabric first, the result might vary due to the fabric weight and quality.

			5	S1	3-5

Set up for slant overedge stitch

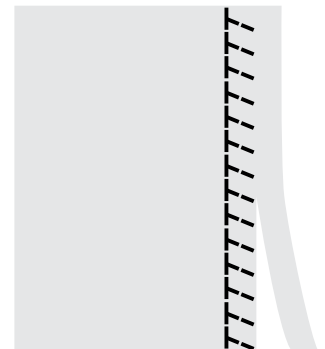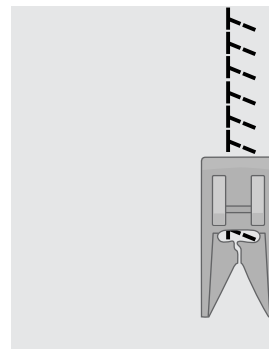


Closed Overlock Stitch

The closed overlock stitch can be used for sewing medium to heavier weight stretch fabrics.

Use this stitch to hem stretch fabrics (A) and for belt loops (B). Fold a hem to the wrong side and stitch with closed overlock stitch from the right side. Trim away excess fabric.

					
			5-6	S1	3-5

Set up for closed overlock stitch

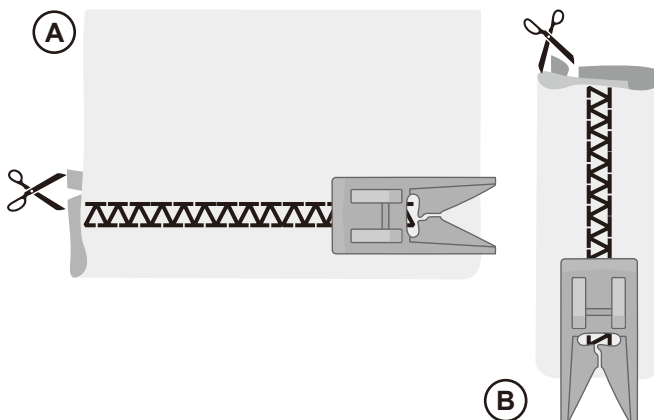

Darning and Mending

Repair Large Holes

To cover large holes it is necessary to sew a new piece of fabric onto the damaged area.

Baste the new piece of fabric onto the damaged area on the right side of the fabric.

Sew over the fabric edges with the zigzag or the multi-step zigzag stitch.


Trim the damaged area close to the seam from the wrong side of the fabric.

					
			4-6	2	3-5

Set up for zigzag

					
			5	1-2	3-5

Set up for multi-step zigzag

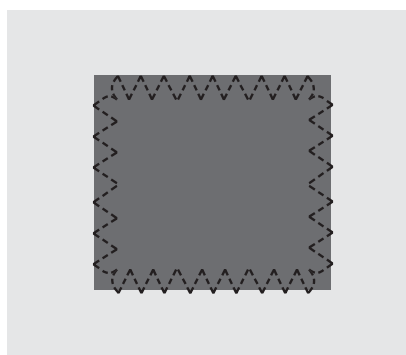


Repair Smaller Holes

A small hole or tear is easily darned with the three-step zigzag stitch.

Sew over the damaged area in rows until it is well covered. Make sure that the rows overlap.

Tip: To make the darning even sturdier, place a fabric underneath the hole/tear before sewing.

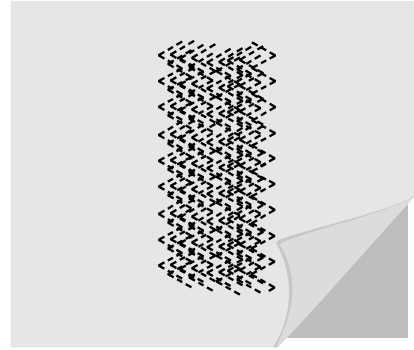


Repair Tears

On tears, frayed edges or small holes it is useful to lay a piece of fabric on the wrong side of the fabric. The underlayered fabric reinforces the damaged area.

Lay a piece of fabric underneath the damaged fabric. It must be a little larger than the damaged area.

Sew over the damaged area using the zigzag or multi-step zigzag stitch.

Trim the piece of fabric used as reinforcement.

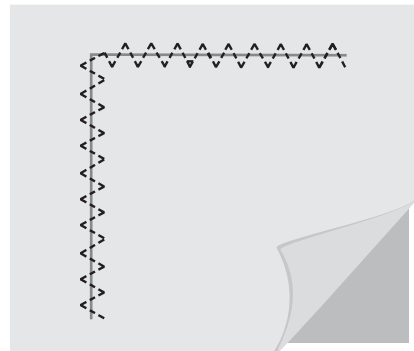

One-Step Buttonhole

Sew buttonholes perfectly sized for your button. The fabric should be interfaced and/or stabilized where buttonholes are to be sewn.


Note: Always sew a test buttonhole on a piece of scrap fabric.

1. Mark the start position of the buttonhole on the fabric (A).
2. On the One-Step Buttonhole Foot, push the button holder open by pushing the lever backwards (B). Insert the button. Push the button holder forward until the button is locked in place (C). The button will determine the length of the buttonhole.
3. Attach the One-Step Buttonhole Foot.
4. Make sure that the thread is pulled through the hole in the presser foot and placed under the foot.
5. Position your fabric under the presser foot so that the marking on the fabric is aligned with the center of the Buttonhole Foot (D).
6. Lower the Buttonhole Lever (E) all the way down, and gently push it away from you.
7. Hold the end of the upper thread and start sewing. The buttonhole is sewn from the front of the presser foot to the back. Stop sewing when the buttonhole is finished.
8. Once the buttonhole is finished, raise the presser foot. Push the buttonhole lever all the way up.
9. To secure the bartack, thread the end of the top thread into a hand sewing needle, pull to the wrong side and tie the end before cutting excess thread.
10. Use a seam ripper and cut the buttonhole open from both ends towards the middle (F).

If you want to sew another buttonhole, do not push the buttonhole lever up when the buttonhole is finished. Instead, push it away from you again. Sew another buttonhole.

			5.0		3-5

Set up for buttonhole

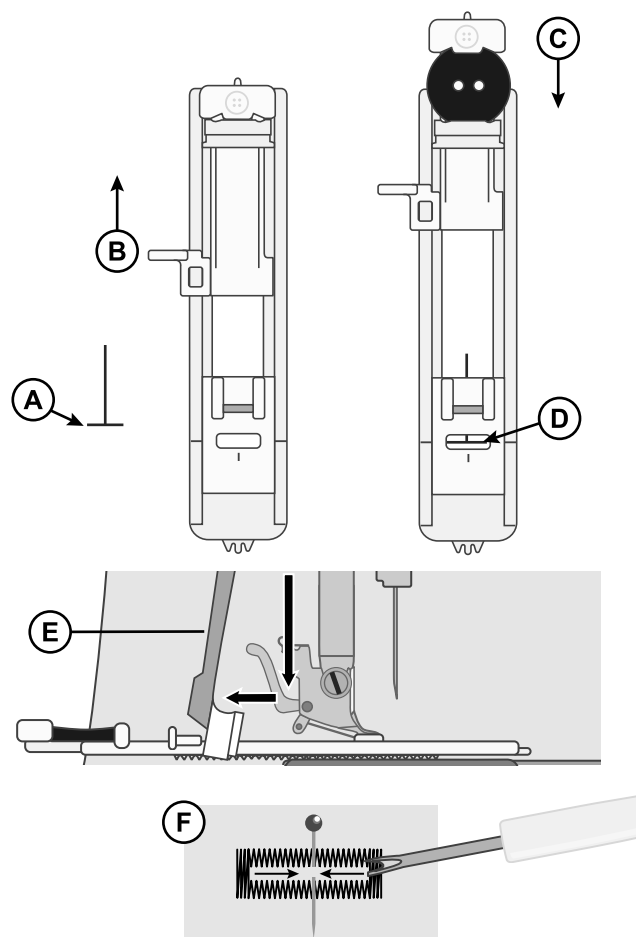

Corded Buttonhole


When sewing buttonholes in stretch fabrics we recommend cording the buttonhole to increase the stability and to keep the buttonhole from stretching out.

Loop a piece of heavy thread or pearl cotton over the finger at the back of the foot (A). Pull the thread tails under the foot, toward the front, then secure around the finger at the front of the foot (B).

Stitch a buttonhole. The satin buttonhole columns will stitch over the cord.

When the buttonhole is finished, lift the cord off the fingers and pull out the slack.

Thread the cord ends into a needle, pull to the wrong side and tie ends before cutting excess.

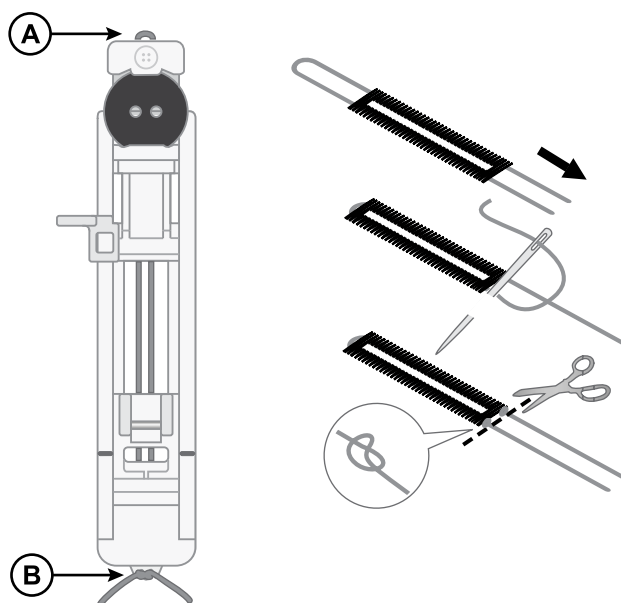


Buttonhole Balance

If needed, the stitch density of the left buttonhole columns can be adjusted with the buttonhole balance dial.

The buttonhole balance dial should usually be in a neutral position (between "+" and "-").

- If the stitches of the left buttonhole column are too dense, turn the dial towards "+".
- If the stitches on the left buttonhole column are too far apart, turn the dial towards "-".

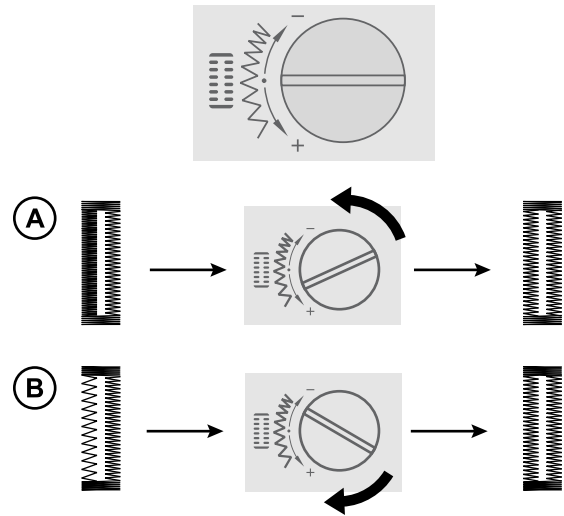

Button Sewing


Fasten buttons easily and quickly with the special button sewing stitch.

Note: The sample below shows how to sew a button using the optional Button Sewing Foot.

- Select the Button Sewing Stitch.
- Lower the feed teeth ([page 13](#)).
- Attach the Button Sewing Foot to your machine.
- Mark the placement of the button with a marking pen (A).
- Place your project under the presser foot, place the button under the foot aligning it with the marking on the fabric. Lower the presser foot (B).
- Turn the handwheel toward you very slowly to be sure the needle clears the holes. Adjust the stitch width if needed (C).
- Start sewing at a low speed. Stop sewing after a few stitches.
- Leave a long thread tail and pull it under the button. Wind the thread tail around the shank.
- Use a hand sewing needle to pull the thread to the wrong side of the fabric and secure.
- To re-engage the feed teeth, move the feed teeth lever back to regular sewing position, and then turn the hand wheel toward you one full turn.

			3-4	-	2-4

Set up for button sewing

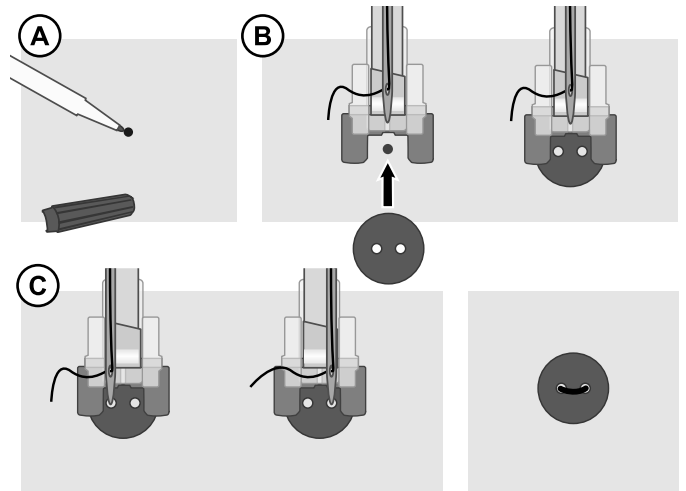


Sew Zippers

The Zipper Foot can be attached on either the right or the left of the needle, making it easy to sew both sides of the zipper.

- To sew the right side of the zipper, attach the foot in the left presser foot position. Set the needle in the left needle position.
- To sew the left side of zipper, attach the foot in the right presser foot position. Set the needle in the right needle position.


					
			0	2-3	3-5

Set up for sewing zippers

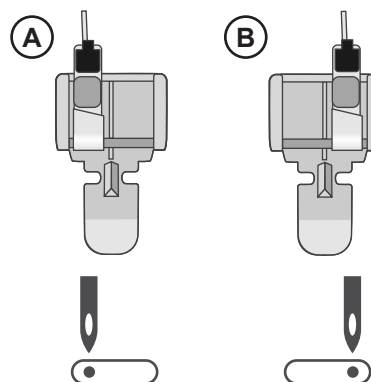

Centered Zipper

- Place the fabric pieces right sides together and pin. Mark the zipper length on your fabric.
- Baste the zipper seam using the specified seam allowance (use straight stitch with stitch length 4mm, thread tension 2). Baste to the end of zipper marking (C).
- Set up the machine for straight stitch (see table above), backstitch a few stitches and sew the rest of the seam using the specified seam allowance (C).
- Press the seam allowances open. Place the right side of the zipper to the wrong side of the seam, tape in place (D).
- Flip your project, making sure that the right side is facing up. Snap on the zipper foot, in the left presser foot position (A).
- Sew along the right side of the zipper to the end of your zipper, remember to backstitch in the beginning (E). Stop with the needle down in the fabric, lift the presser foot and turn your project to sew across the bottom of the zipper.
- Attach the zipper foot to the right presser foot position (B). Sew the remaining zipper side as you did with the first side (F).
- Flip your project to remove the tape on the back side.
- Flip your project to the right side again and remove the basting stitches.

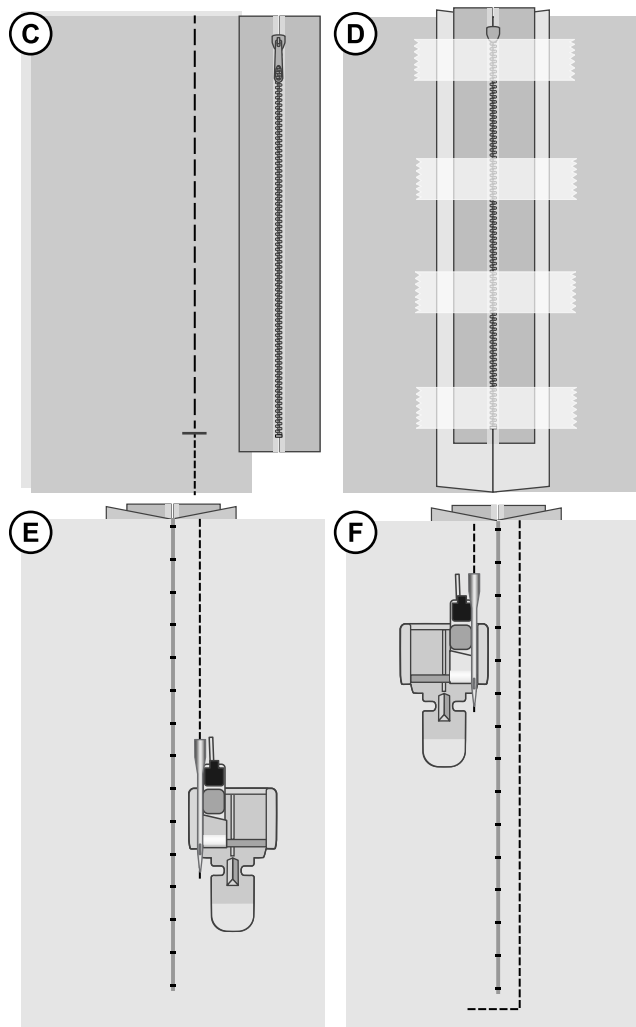

MAINTENANCE

Cleaning the Machine

To keep your sewing machine operating well, clean it often. No lubrication (oiling) is needed. Wipe the exterior surface of your machine with a soft cloth to remove any dust or lint built up.

Cleaning the Bobbin Area




Raise the needle and turn off the machine.

Remove the presser foot. Remove the bobbin cover by pushing the small button to the right of the cover towards the right. Remove the bobbin.

Clean the bobbin area with the brush found among the accessories.

Attach the presser foot, insert the bobbin and replace the bobbin cover.

Note: Do not blow air into the bobbin case area. The dust and lint will be blown into your machine.

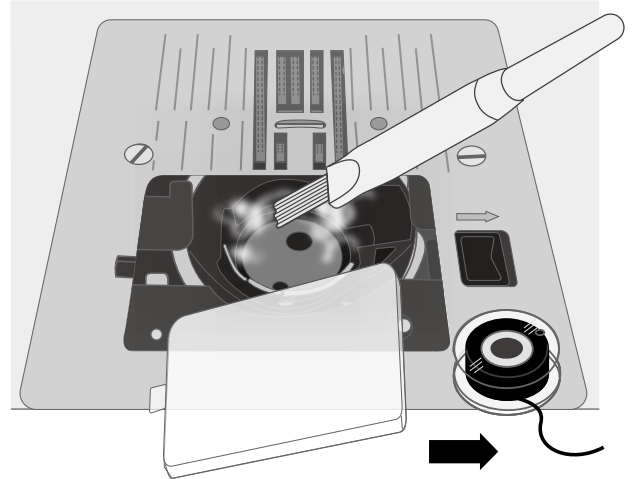

Cleaning under the Needle Plate



Raise the needle and turn off the machine.

Clean the area under the needle plate after sewing several projects or any time you notice an accumulation of lint.

Remove the presser foot. Remove the bobbin cover by pushing the small button to the right of the cover towards the right. Remove the bobbin.



Remove the screws in the needle plate by using the screwdriver. Lift up and remove the needle plate.

Clean the area with the brush or with a dry cloth.

Note: Do not blow air into the bobbin case area. The dust and lint will be blown into your machine.

Place the needle plate over the feed teeth, replace and tighten the screws.

Attach the presser foot, insert the bobbin and replace the bobbin cover.

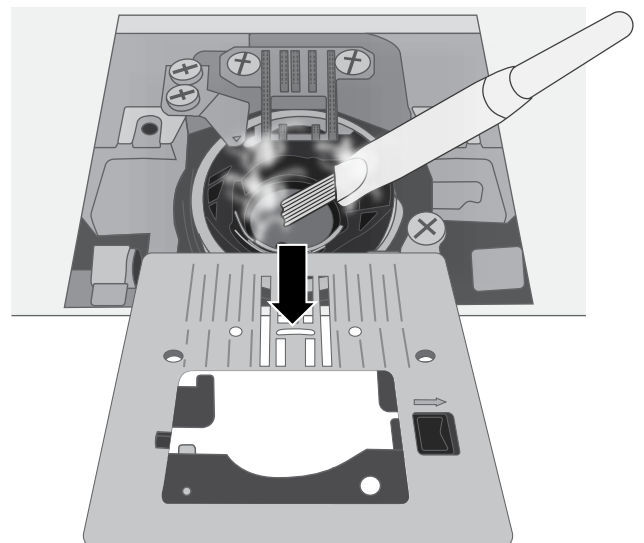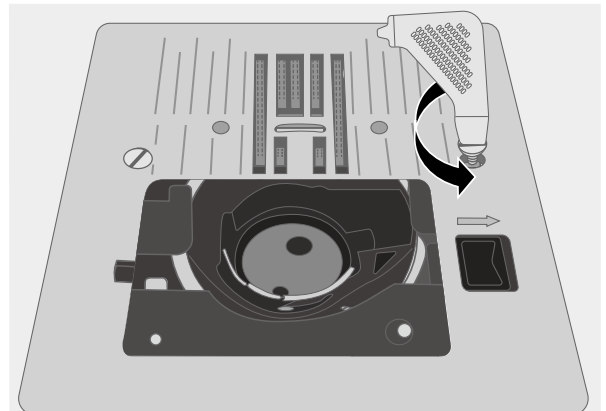

Troubleshooting

Thread Loops on Underside of Fabric

- Possible cause:** Thread looping on the underside of the fabric is always an indication that the upper thread is not correctly threaded. This happens when the upper thread is not correctly placed in the thread tension mechanism and has not been threaded through the take up lever.
- Solution:** *Rethread the machine, making sure to first raise the presser foot lifter before starting to thread, so thread can be properly seated in the tension mechanism and take up lever. To know if you have rethreaded the machine correctly, try this test.*
- *Raise the presser foot lifter ([page 7](#)) and thread the top of the machine ([page 10](#)).*
 - *Thread the needle, but don't put the thread under the presser foot yet. As you pull the upper thread to the left, it should pull freely.*
 - *Put the presser foot lifter down. As you pull the upper thread to the left, you should feel resistance. This means you are threaded correctly.*
 - *Put the thread under the presser foot, and then draw up the bobbin thread. Slip both thread tails under the presser foot towards the back. Lower the presser foot and begin sewing.*
- If you put the presser foot lifter down, but the thread still pulls freely (you feel no difference whether the presser foot is up or down), this means that you have threaded incorrectly. Remove the upper thread and rethread the machine.*

Bobbin Thread Breaking

- Possible cause:** Bobbin threaded incorrectly.
- Solution:** *Check that bobbin is placed correctly in the bobbin holder ([page 9](#)).*
- Possible cause:** Bobbin wound too full or unevenly.
- Solution:** *Bobbin thread may not have been correctly placed into bobbin winding tension disc during the bobbin winding process ([page 9](#)).*
- Possible cause:** Dirt or lint in bobbin holder.
- Solution:** *Clean bobbin holder ([page 25](#)).*
- Possible cause:** Wrong bobbins being used.
- Solution:** *Use bobbins that are the same style as those that come with the machine (SINGER® Class 15 transparent bobbins) – don't substitute.*

Bobbin Thread Showing on Top of Fabric

- Possible cause:** Top thread too tight.
- Solution:** *Reduce upper thread tension ([page 13](#)).*
- Possible cause:** Thread path is obstructed, putting extra tension on top thread.
- Solution:** *Check that the top thread path is not obstructed and thread is moving freely through the thread path.*
- Possible cause:** Bobbin thread not in bobbin case tension.
- Solution:** *Rethread bobbin ([page 9](#)).*

Bobbin Winding Difficulties

- Possible cause:** Bobbin thread loosely wound on bobbin.
- Solution:** *Rewind bobbin, making sure that the thread is placed snugly in the bobbin winding tension disc ([page 9](#)).*
- Possible cause:** Bobbin winding spindle not fully engaged, therefore bobbin not winding.
- Solution:** *Check that the bobbin winding spindle has been fully engaged before starting to wind.*

Possible cause: Bobbin is winding sloppily because thread end not held at beginning of winding process.

Solution: *Before starting to wind, hold the thread tail (coming out of the bobbin) securely, allow the bobbin to partially fill, then stop to trim the thread tail close to the bobbin.*

Fabric Puckers

Possible cause: Top thread is too tight.

Solution: *Reduce top thread tension ([page 13](#)).*

Possible cause: Stitch length is set too short.

Solution: *Increase stitch length setting ([page 15](#)).*

Possible cause: Wrong style needle for fabric type.

Solution: *Use correct needle style and size for your fabric ([page 11](#) and [page 12](#)).*

Fabric Is Tunneling Under Stitches

Possible cause: Fabric is not properly stabilized for the density of the stitches (for example, satin stitch applique).

Solution: *Add a fabric stabilizer underneath the fabric to help keep the stitches from tunneling in together, forming a puckered ridge in fabric.*

Loud Noise When Sewing

Possible cause: Thread not in take-up lever.

Solution: *Rethread the machine, making sure the take up lever is in its highest position so thread goes in the eye of the take up lever – turn machine hand wheel toward you to raise the take up lever to its highest position for threading.*

Possible cause: Thread path is obstructed.

Solution: *Check that thread is not caught on the thread spool or behind the spool cap.*

Machine is Not Feeding Fabric

Possible cause: Presser foot lifter has not been lowered onto fabric after threading.

Solution: *Lower the presser foot lifter before starting to sew. Don't "push" or "pull" the fabric as you sew.*

Possible cause: Feed teeth are lowered.

Solution: *The feed teeth need to be raised and re-engaged by turning the handwheel one full revolution ([page 13](#)).*

Possible cause: Stitch length is set at zero.

Solution: *Increase stitch length setting ([page 15](#)).*

Machine Will Not Run

Possible cause: Bobbin winding spindle is engaged when you try to sew.

Solution: *Disengage bobbin winding spindle by pushing it to the left.*

Possible cause: Power cord and/or foot control not plugged in correctly.

Solution: *Make sure power cord/foot control are correctly seated in machine and power supply ([page 6](#)).*

Possible cause: Wrong bobbins being used.

Solution: *Use bobbins that are the same style as those that come with the machine (SINGER® Class 15 transparent bobbins) – don't substitute.*

Needles Breaking

Possible cause: Bent, dull or damaged needle.

Solution: Discard needle, insert new needle ([page 13](#)).

Possible cause: Wrong size needle for fabric.

Solution: Insert appropriate needle for fabric type ([page 11](#)).

Possible cause: Machine not threaded correctly.

Solution: Rethread the machine completely ([page 10](#)).

Possible cause: "Pushing" or "pulling" fabric.

Solution: Don't manually push/pull fabric in order to sew, but allow the machine's feed teeth to draw fabric under the presser foot as you guide it.

Needle Threader Not Working

Possible cause: Needle not in correct position.

Solution: Raise needle to its highest position by turning hand wheel toward you.

Possible cause: Needle inserted incorrectly.

Solution: Needle all the way up in the needle clamp.

Possible cause: Needle is bent.

Solution: Remove the bent needle, insert new needle ([page 13](#)).

Possible cause: Hook pin damaged.

Solution: Needle Threader needs replacement. Contact authorized service center.

Skipping Stitches

Possible cause: Needle inserted incorrectly.

Solution: Check that flat side of needle top is toward back of machine and needle is up as far as it can go, then tighten needle clamp screw.

Possible cause: Wrong needle for fabric sewn.

Solution: Use correct needle style and size for your fabric ([page 11](#) and [page 12](#)).

Possible cause: Bent, dull or damaged needle.

Solution: Discard needle and insert new needle ([page 13](#)).

Stitches Distorted

Possible cause: "Pushing" or "pulling" the fabric.

Solution: Don't manually push/pull fabric in order to sew, but allow the machine's feed teeth to draw fabric under presser foot as you guide it.

Possible cause: Incorrect stitch length setting.

Solution: Adjust stitch length setting ([page 15](#)).

Possible cause: Stabilizer may be needed for technique.

Solution: Place stabilizer underneath fabric.

Thread Bunching at Beginning

Possible cause: Top and bobbin threads have not been properly placed underneath presser foot before starting to sew.

Solution: Ensure that both the top thread and the bobbin thread are under the presser foot and toward the back before starting to sew.

- Possible cause:** Sewing was started with no fabric under the presser foot.
- Solution:** Place fabric under foot, making sure that needle comes down into fabric; lightly hold both thread tails for first few stitches.
- Possible cause:** Stabilizer may be needed for technique.
- Solution:** Place stabilizer underneath fabric.

Upper Thread Breaking

- Possible cause:** Thread path obstructed
- Solution:** Check if thread is caught on thread spool (rough spots on the spool itself) or behind spool pin or spool cap (if the thread has fallen behind the spool cap and therefore cannot feed freely through the machine path).
- Possible cause:** Machine is not threaded correctly.
- Solution:** Remove upper thread completely, raise presser foot lifter, rethread machine making sure thread is in take-up lever (raise take up lever to its highest position by turning hand wheel toward you).
- Possible cause:** Upper tension too tight.
- Solution:** Reduce upper thread tension ([page 13](#)).

Technical Specification

Type of Foot Control GTD-1 DC (24V)	Rated Voltage 100-240 VAC, 50-60 Hz	Sewing Speed Maximum 1100 rpm (using straight stitch with default stitch length)
Presser Foot Rise Height 6.5mm	Stitch Width 0-6mm	Stitch Length 0-4mm
Protection Class II (Europe)	Type of Light LED light	Weight 6.6kg
Machine Dimensions Length: ≈400mm Width: ≈170mm Height: ≈280mm		

We reserve the right to change the machine equipment and the assortment of accessories without prior notice, or make modifications to the performance or design. Such modifications, however, will always be to the benefit of the user and the product.

INTELLECTUAL PROPERTY

SINGER® is a trademark of Singer Sourcing Limited LLC or its Affiliates.



Please note that on disposal, this product must be safely recycled in accordance with relevant National legislation relating to electrical/ electronic products. Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact your local government for information regarding the collection systems available. When replacing old appliances with new ones, the retailer may be legally obligated to take back your old appliance for disposal free of charge.

If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.



FR

Cet appareil,
ses accessoires
et piles
se recyclent

À DÉPOSER
EN MAGASIN



OU



Points de collecte sur www.quefairedemesdechets.fr
Privilégiez la réparation ou le don de votre appareil !



FR



Importer to the UK:

VSM UK

Ravensbank House, Ravensbank Drive
North Moons Moat, Redditch. B98 9NA, United Kingdom

Manufacturer

VSM GROUP AB, SVP Worldwide
Soldattorpsgatan 3
SE-55474, Jonkoping, SWEDEN

SINGER®
ORIGINAL SINCE 1851.